


# How to choose the perfect products for applications and sites.

You can customize various combinations of the materials and sizes of freebears according to the intended use and installation site.


## 1. Select the table size (W, D)

Determine the width and depth of the table body

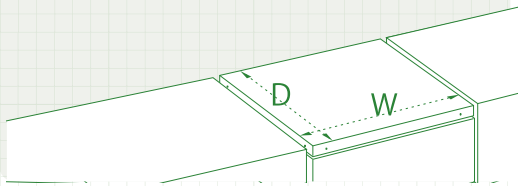


## 2. Select the freebears according to the conveyance object

Select the freebears to be mounted

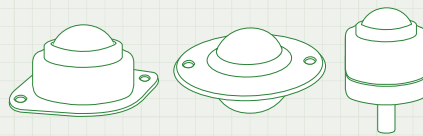


## 3. Select the mounting method and ball pitch of the freebears

Determine the arrangement and pitch of the freebears

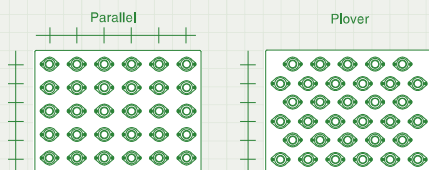


## 4. Select a table according to the intended use

Select the type of the table

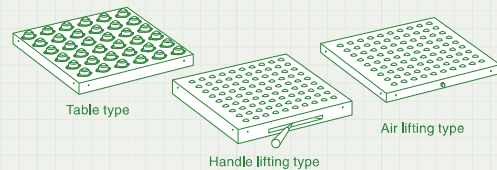


## 5. Whether to use the fall-preventing guides or not Select a fixed type or removable type

Determine the presence or absence of the fall-preventing guides and their type

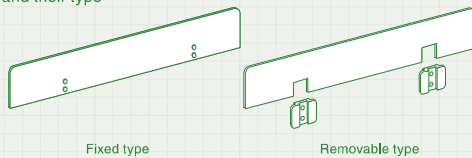



## 6. Whether to use a table fixing rack or not Select the rack

Determine the type of the table rack

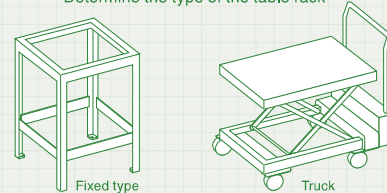

## 7. Select adjusters and casters

Determine the type of the adjusters

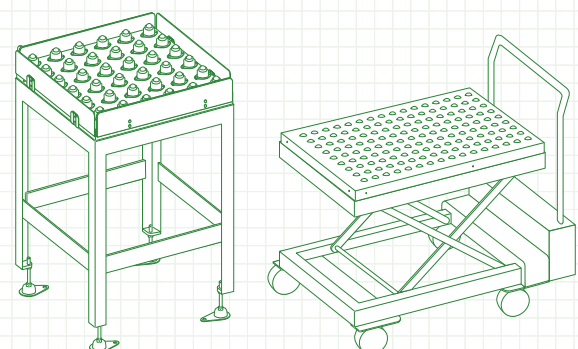
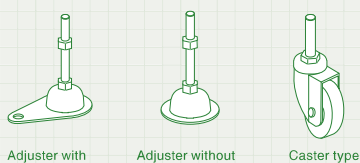


# Inquiry Sheet

E-MAIL  
overseas-div@freebear.co.jp

Please copy this sheet and fill out the necessary items, and then send it to us by E-MAIL.

Filling date (month) (day) (year)

Your company name		Plant name		
Address 〒				
Filled by		Department		
TEL.		FAX.		
e-mail				
Please fill in the contents under consideration.				
Conveyance object	Overall and conveying surface shape			
	Size	Max.: Width ( ) mm x Depth ( ) mm x Height ( ) mm Weight ( )kg		
		Min.: Width ( ) mm x Depth ( ) mm x Height ( ) mm Weight ( )kg		
	Rust-proof	<input type="checkbox"/> Yes <input type="checkbox"/> No	Dust-proof <input type="checkbox"/> Yes <input type="checkbox"/> No	Temperature <input type="checkbox"/> Room temperature <input type="checkbox"/> Operating temperature ( °C ~ °C )
	Environment	<input type="checkbox"/> Normal (indoor) <input type="checkbox"/> Outdoor <input type="checkbox"/> Clean room <input type="checkbox"/> Other ( )		
	Conveying surface material			Uneven load <input type="checkbox"/> Yes <input type="checkbox"/> No
Budget			Implementation time	
Selection of freebear table	1	Fill in the table size.		
		W( )mm x D( )mm		
	2	Select whether to have the freebear to be mounted chosen by our company or by yourself. For the latter, please fill in the model.		
		<input type="checkbox"/> By our company <input type="checkbox"/> By yourself( ) ※Example:(C-8Y)		
	3	Select the mounting method of the freebears, and fill in the pitch.		
		<input type="checkbox"/> Parallel( ) Pitch <input type="checkbox"/> Plover( ) Pitch <input type="checkbox"/> By our company		
	4	Select the type of the table. If you select types other than FT, select the location of the handle (air supply port).		
		<input type="checkbox"/> FT <input type="checkbox"/> HFT <input type="checkbox"/> AFT <input type="checkbox"/> HRT <input type="checkbox"/> ART	 Select the location of the handle (air inlet) from the left figure. <input type="checkbox"/> W1 <input type="checkbox"/> D1 <input type="checkbox"/> W2 <input type="checkbox"/> D2	
5	Select whether to use the fall-preventing guides or not. Please circle the Fixed, Removable, or No for each mounting location.			
	<input type="checkbox"/> Yes <input type="checkbox"/> No <input type="checkbox"/> W1 (Fixed, Removable, No) <input type="checkbox"/> D1 (Fixed, Removable, No) <input type="checkbox"/> W2 (Fixed, Removable, No) <input type="checkbox"/> D2 (Fixed, Removable, No)			
6	Select whether to use the rack or not. If you select "Yes", select the type of the rack and fill in the size.			
	<input type="checkbox"/> Yes <input type="checkbox"/> No <input type="checkbox"/> Fixed rack <input type="checkbox"/> Truck	Height from conveying surface to the floor H( )mm <input type="checkbox"/> Movable type Stroke ( mm~ mm) <input type="checkbox"/> Fixed type Height from conveying surface to the floor H( )mm		
7	Select the type of the adjusters or casters. Please circle the material for the casters in ( ).			
	<input type="checkbox"/> Adjuster — <input type="checkbox"/> With fixing part <input type="checkbox"/> Without fixing part <input type="checkbox"/> Caster (Rubber, Polyurethane, Nylon) — <input type="checkbox"/> With brake <input type="checkbox"/> Without brake			
8	Select whether to specify the coating color or not. If you select "Yes", please fill in the specified color.			
	<input type="checkbox"/> Yes — Munsell color( ) <input type="checkbox"/> No — Standard color of the freebear (Munsell color 5G4/8 Green)			